



Polaris TV Remote Setup

1. Press CBL one time. The CBL button at the top of the remote should flash once.
2. Hold the Setup button until the CBL button blinks twice.
 - a. Press 982. If the CBL button blinks twice that means the remote is locked. If the CBL button blinks 4 times that means the remote is Unlocked.
 - b. Make sure the remote is Unlocked.
3. Press the CBL button once.
4. Hold Setup until the CBL button blinks twice.
5. If you have the ADB set top box enter the code 2586. If you have the Amino set top box press 1481.
6. The CBL button should blink twice.
7. Verify the correct code has been entered by aiming the remote at the set top box and changing channels, and bringing up the guide.
8. After verification, press the CBL button one time.
9. Hold Setup button until the CBL button blinks twice.
10. Press 982. The CBL button should blink twice to indicate that it is locked.

Setting the TV Code

1. Press and release TV at the top of the Remote Control
2. Press and HOLD the SETUP until the TV Key blinks twice
3. Find your TV Code in the table below
4. Type the 4-Digit code. If the code is entered correctly the TV key will blink twice.
5. Aim the remote at the TV and press the TV key and if the code is correct the TV will cut off.
6. If the TV doesn't cut off try Steps 1-5 again with the next code.
7. If none of the codes work press TV once, then press SETUP until the TV key blinks twice.
8. Enter on the key pad 9-9-1. The TV key blinks twice
9. Aim the remote at the TV and press the TV once
10. Continually press and release CH+ until the TV turns off. Stop when the TV turns off.
11. Press SETUP once to lock in the code. The TV key blinks twice.

A-Mark	0003
Abex	0032
Admiral	0093, 0463
Advent	0761, 0783, 0815, 0817, 0842, 1933
Adventura	0046
Aiko	0092
Aiwa	0701
Akai	0030, 0060, 0098, 0672, 0702, 0812, 1903
Alaron	0179, 0183, 0216
Albatron	0700, 0843
Ambassador	0177
America Action	0180
Ampro	0751
Anam/Anam International	0004, 0009, 0068, 0180, 0055, 0161
AOC	0003, 0019, 0030, 0052, 0137, 0185
Apex/Apex Digital	0156, 0748, 0765, 0767, 0879, 1943
Archer	0003
Audiovox	0003, 0092, 0180, 0451, 0623, 0802, 0875, 1284, 1937, 1951, 1952
Adventura	0171
Axion	1937
Belcor	0019
Bell & Howell	0016, 0154
BenQ	1032, 1315
Boxlight	0893
Bradford	0180
Broksonic	0019, 1935
Brockwood	0019
Cadia	1283
Candle	0030, 0046, 0056, 0186
Carnivale	0030
Carver	0054, 0170
Celebrity	0000
Celera	0765
CCE	0217, 0329
Champion	1362
Changhong	0765
Cinego	1986
Citizen	0030, 0039, 0046, 0056, 0060, 0092, 0186, 0280
Cinego	1986
Coby	0073, 0095, 0459, 0462, 0558, 0873
Clairtone	0185
Clarion	0180
Commercial Solutions	0047, 1447

Concerto	0056
Contec/Cony	0157, 0158, 0180, 0185
Craig	0161, 0180
Crosley	0054
Crown	0039, 0180
Curtis Mathes	0016, 0030, 0039, 0047, 0054, 0056, 0060, 0093, 0145, 0154, 0166, 0451, 0466, 0702, 0747, 1147, 1347
CXC	0180
Daewoo	0019, 0039, 0066, 0067, 0091, 0092, 0451, 0623, 0661, 0672, 1661
Daytron	0583, 0833, 0834
Daytron	0023, 0073, 0095, 0107, 0108, 0573, 0587, 0741
Dell	1080, 1178, 1264, 1403, 1454
Denon	0145, 0511
Denstar	0628
Diamond Vision	1996, 1997
DMTech	1996, 1997
Dream Vision	1297
Dumont	0017, 0019
Durabrand	0003, 0171, 0178, 0180, 0463, 1034
Dynex	0167, 0415, 0424, 0567, 0577, 0858, 0169, 0384, 0392, 0415, 0423, 0424, 0812, 0868
Dwin	0093, 0720, 0747, 0774
Dynatech	0049
Electroband	0000, 0185
Electrograph	1755
Electrohome	0381, 0389, 0409
Emerson	0019, 0038, 0039, 0154, 0158, 0171, 0177, 0178, 0179, 0180, 0181, 0182, 0183, 0185, 0236, 0270, 0280, 0282, 0451, 0463, 0623, 1944, 1963
Envision	0030, 0813, 1365
Epson	0833, 0840, 1290
ESA	0171, 0812
Fisher	0154, 0159
Funai	0171, 0179, 0180
Futuretech	0180
Fujitsu	0179, 0186, 0683, 0809, 0853
Gateway	1755, 1756
GE	0021, 0027, 0029, 0047, 0051, 0055, 0135, 0138, 0174, 0178, 0251, 0279, 0282, 0451, 0747, 1347, 1447
Gibraltar	0017, 0019, 0030
Goldstar (LG)	0001, 0002, 0019, 0030, 0032, 0106, 0178, 0409
Go Video	0886
Goodmans	0360
Gradiente	0392

Grundig	0683
Grunpy	0179, 0180
Haier	0768, 1034
HallMark	0178
Hannspree	1348, 1351, 1352
Hantarex	1338
Harley Davidson	0043, 0179
Harmon/Kardon	0054, 0078
Harvard	0068, 0180
Havermy	0093
Helios	0865
Hello Kitty	0451
Hewlett Packard	1088, 1089, 1101, 1494, 1502
Hisense	0748
Hitachi	0016, 0032, 0038, 0056, 0095, 0097, 0145, 0151, 0173, 0227, 0279, 0409, 0413, 1145, 1960
HP	1088, 1089, 1101, 1494, 1502
Hyundai	0849
iLO	1286, 1990
Infinity	0054
Initial	1990
Inteq	0017
Janeil	0046
JBL	0054
JCB	0000
Jensen	0050, 0761, 0815, 0817, 1299, 1933
JVC	0036, 0053, 0069, 0160, 0169, 0182, 0731, 1253, 1352
Kamp	0216
Kawasho	0158, 0216, 0308
Kaypani	0052
KEC	0180
Kenwood	0019, 0030
KLH	0765, 0767, 1962
Kloss	0024, 0046, 0078
KMC	0106
Konka	0628, 0632, 0638, 0703, 0707
LG (Goldstar)	0178, 0442, 0700, 0856, 1178, 1265, 1325, 1993
Loewe	0136
Logik	0016
Luxman	0068, 0073, 0095, 0108, 0573, 0587
LXI	0047, 0054, 0148, 0154, 0156, 0178, 0747
Magnavox (Philips)	0020, 0024, 0028, 0030, 0036, 0054, 0096, 0179, 0186, 0187, 0230, 0386, 0706, 0802, 1254, 1454, 1944, 1963

Majestic	0015, 0016
Marantz	0030, 0054, 0444, 0704, 0854, 0855, 1154, 1454
Matsushita	0250, 0650
Maxtent	1755
Megapower	0700
Megatron	0215
MEI	0185
Memorex	0016, 0106, 0150, 0154, 0178, 0179, 0463
MGA	0019, 0030, 0150, 0155, 0178
Midland	0017, 0032, 0039, 0047, 0051, 0135, 0747
Mintek	1990
Minutz	0021
Mitsubishi	0014, 0019, 0093, 0098, 0150, 0155, 0178, 0331, 0358, 0836, 0868, 1250, 1550
Monivision	0700, 0843
Motorola	0055, 0093
MTC	0019, 0030, 0049, 0056, 0060, 0091, 0185, 0216
Multitech	0049, 0180, 0217
NAD	0156, 0178, 0866
NEC	0019, 0030, 0036, 0056, 0170, 0434, 0497, 0882, 1704
Net TV	1755
Nikko	0030, 0092, 0178, 0317
Noblex	0430
Norcent	0748, 0824, 1365
Norwood Micro	1286, 1296, 1303
Noshi	0018
NTC	0092
Olevia	1144, 1240, 1331
Onwa	0180
Optimus	0154, 0166, 0250, 0650
Optoma	0887, 1348
Optonica	0093, 0165
Orion	0179, 0236, 0463, 1463
Panasonic	0051, 0055, 0162, 0226, 0250, 0338, 0375, 0650, 1410, 1941, 1946, 1947
Penny	0002, 0003, 0018, 0019, 0021, 0027, 0030, 0032, 0039, 0047, 0051, 0060, 0110, 0135, 0138, 0149, 0156, 0178, 0309, 0747, 1347
Philco	0019, 0020, 0028, 0030, 0054, 0096, 0302
Philips (Magnavox)	0054, 0398, 0403, 0404, 0405, 0419, 0423, 0426, 0447, 0456, 0459, 0690, 1154, 1454
Pilot	0019, 0030, 0039
Pioneer	0038, 0166, 0172, 0679, 0866, 1260
Planar	0747
Polaroid	0765, 0865, 1276, 1314, 1316, 1326, 1327, 1328, 1991, 1992
Portland	0019, 0039, 0092

Prima	0761, 0783, 0815, 0817, 1933
Prima	0072, 0837, 1933
Princeton	0700, 0717
Prism	0051
Proscan	0047, 0466, 0747, 1347, 1447
Proton	0003, 0031, 0052, 0178, 0466
Protron	1320, 1323
Proview	1498
Pulsar	0017, 0019
Quasar	0051, 0055, 0165, 0219, 0250, 0650
Radio Shack	0019, 0030, 0032, 0039, 0047, 0056, 0154, 0165, 0178, 0180, 0409, 0747
RCA	0018, 0019, 0029, 0038, 0047, 0090, 0135, 0174, 0278, 0679, 0747, 1047, 1147, 1247, 1347, 1447, 1547, 1948, 1953, 1958
Realistic	0019, 0030, 0032, 0039, 0056, 0154, 0165, 0178, 0180
Rhapsody	0183, 0185, 0216
Runco	0017, 0030, 0251, 0497, 0603
Sampo	0030, 0032, 0039, 0052, 0100, 0110, 1755
Samsung	0019, 0030, 0032, 0056, 0060, 0178, 0217, 0329, 0408, 0427, 0587, 0702, 0766, 0812, 0814, 1060, 1312, 1395, 1903
Samsux	0039
Sansui	0463, 1935
Sanyo	0088, 0107, 0146, 0154, 0159, 0232, 0484, 0799, 0893, 1142
Sceptre	1360
Scimitsu	0019
Scotch	0178
Scott	0019, 0178, 0179, 0180, 0236, 0309
Sears	0015, 0047, 0054, 0056, 0146, 0148, 0149, 0154, 0156, 0159, 0168, 0171, 0178, 0179, 0281, 0747
Seleco	1297, 1351
Sharp	0039, 0093, 0153, 0157, 0165, 0220, 0281, 0386, 0398, 0491, 0688, 0689, 0818, 0851
Sheng	Chia 0093
Shogun	0019
Signature	0016
SIM2 Multimedia	1297
Simpson	0186, 0187
Sole	0813
Sony	00000, 0011, 0080, 0111, 0273, 0353, 0810, 0834, 1100, 1317
Soundesign	0178, 0179, 0180, 0186
Sova	1320, 1952
Spectricon	0003, 0137
Squareview	0171
SSS	0019, 0180

Starlite	0180
Studio Experience	0843
Superscan	0093, 0864
Supre-Macy	0046
Supreme	0000
SVA	0587, 0748, 0768, 0865, 0870, 0871, 0872
Sylvania	0020, 0028, 0030, 0054, 0065, 0096, 0171, 0381, 1944, 1963
Symphonic	0171, 0180
Syntax	1144, 1240, 1331
Tandy	0093
Tatung	0003, 0049, 0055, 0396, 1101, 1285, 1286, 1287, 1288, 1361, 1756
Technics	0179
Technol Ace	0179
Technovox	0007
Techview	0847
Techwood	0003, 0051, 0056
Teknika	0016, 0019, 0039, 0054, 0056, 0060, 0092, 0150, 0175, 0179, 0180, 0186, 0312, 0322
Telefunken	0056, 0074, 0702
Tera	0031
Tevion	0065, 0414
Thomson	0209, 0210
TMK	0056, 0177, 0178
TNCi	0017
Toshiba	0036, 0060, 0149, 0154, 0156, 0650, 0832, 0845, 1156, 1256, 1265, 1325, 1343, 1356, 1360, 1656, 1704, 1935, 1945, 1971
Tosonic	0185
Totevision	0039
Trical	0157
TVS	0463
Ultra	0391
Universal	0027
Universum	1337
US Logic	1286, 1303
Vector Research	0030
Victor	0053
Video Concepts	0098
Vidikron	0054, 0242
Vidtech	0019, 0036, 0178
Viewsonic	0857, 0864, 0885, 1330, 1342, 1755
Viking	0046, 0312
Visart	1336
Vizio	0864, 0885, 1756

Wards	0016, 0019, 0020, 0021, 0027, 0028, 0029, 0030, 0054, 0056, 0080, 0096, 0111, 0165, 0174, 0178, 0179, 0202, 0866, 1156
Waycon	0156
Westinghouse	0000, 0451, 0885, 0889, 1282
White Westinghouse	0463, 0623
Yamaha	0019, 0030, 0769, 0833, 0839
Zenith	0016, 0017, 0092, 0178, 0463, 1145, 1265
Zonda	0003