



Setting up Gateway ID

1. Locate the remote that controls the TV in the room with the gateway (if this remote goes to the TV in the room with the gateway use it)
2. On the gateway Press the Menu button
3. Then on the remote Press the Down Arrow, Then press Select
4. Press the PPV button and you should have an informational message on the screen with the source code that the gateway requires. This should be a three digit number. Please write this down.
5. Press & hold the LED button. After a short pause the LED light should start flashing. Now press the Record button (button with the little red dot on it) once and release it. This should cause the LED button to remain solid.
6. Press & release the B key. The LED button temporarily turns off. Releasing the key causes the LED button to light up again. You can now set the correct Gateway ID.
7. Enter the three-digit code assigned to your RG. (i.e. 007)
8. The LED light will blink twice

Setting up Remote for TV Stream

1. Press & hold the LED button. Hold until the LED button blinks, then release. Press the Record button (button with the little red dot on it) once and release.
2. Press & release the A key. The LED button temporarily turns off. Releasing the key causes the LED button to light up again. You can now set the correct Remote Control ID
3. Enter the single-digit Remote Control ID
 - a. Press 0 for Stream 1 (TV Channel 3) if the Gateway is in the same room
 - b. Press 1 for Stream 1 (TV Channel 3) if the Gateway is NOT in the same room
 - c. Press 2 for Stream 2 (TV Channel 7)
 - d. Press 3 for Stream 3 (TV Channel 13)
4. The LED button will blink three times and go out. The new Remote Control ID is stored in the device.

Setting TV Code

1. Press and hold the LED button at the top of the remote until it starts flashing. Release the LED button.
2. Press the Record button (the button with the little red dot on it) one time and release it. The LED button should be on solid now.
3. Press the C button one time and release it. The LED button should blink off and come back on.
4. Find the code listed for your brand of TV from the list below.
5. Type the code into the remote. If the code was correct your remote should now control the power and volume on your TV.
6. If it was not correct repeat steps 1-5 and enter the next code.

AOC	005, 006, 019, 024, 032, 120, 140
Admiral	003, 018, 041, 087, 125, 129, 187, 194, 210
Aiko	024
Aiwa	194, 251
Akai	000, 005, 006, 032, 070, 072, 075, 107, 108, 120, 135, 139, 149
Alaron	187
Amark	032, 098, 120, 224
Amstrad	033
Anam	005, 009, 021, 032, 041, 120, 121, 183
Anam-National	211
Archer	032, 120
Audiovox	024, 032, 041, 120, 130
Audio Dynamics	238
BPL	144
Bell & Howell	018, 194
Broksonic	005, 010, 027, 174, 176, 225, 226, 245
CXC	041
Candle	005, 006, 022, 025
Capehart	019
Carver	010, 027
Centurion	005, 006, 194
Citizen	005, 006, 010, 016, 018, 022, 024, 025, 027, 098, 202, 224
Concerto	005, 010, 027
Contec	017, 041, 054, 181, 185, 227
Corando	098, 224
Coronado	098, 224
Craig	021, 041
Crown	041, 098, 224
Curtis-Mathis	005, 006, 010, 016, 018, 027, 059, 098, 125, 131, 194, 202, 210, 224, 231, 251
Daewoo	005, 010, 024, 027, 029, 030, 032, 098, 120, 130, 214, 215, 224, 247, 250, 252
Daytron	006, 024, 098, 194, 224
DBX	238
Denon	052
Dimensia	125
Dixi	010, 027, 032, 120
Dumont	001
Electrohome	072, 098, 149, 224, 240
Emerson	005, 017, 033, 035, 037, 038, 039, 041, 054, 098, 130, 132, 141, 143, 176, 181, 185, 187, 194, 203, 222, 223, 224, 225, 226, 227, 251, 252, 253
Envision	006
Fisher	042, 099, 194, 217
Fujitsu	187
Funai	024, 041, 132, 187, 251

Futuretech	041
GE	003, 005, 008, 009, 043, 0087, 125, 130, 143, 147, 165, 182, 183, 206, 210, 211, 228, 231, 233, 248
Goldstar	005, 006, 010, 027, 045, 098, 168, 194, 223, 224, 230, 238
Gradiente	057, 060
Granada	010, 027
Hallmark	005
Harman Kardon	238
Hinari	010, 027, 187
Hitachi	005, 017, 018, 024, 048, 049, 050, 051, 052, 053, 054, 055, 098, 116, 126, 142, 160, 185, 224, 231, 251
Infinity	010, 027
JBL	010, 027
Runco	001, 006, 243
SAA	145
SSS	005, 041
Saba	051, 116, 142
Saisho	032, 033, 109, 120
Sampo	006, 019, 156, 194
Samsung	005, 006, 010, 016, 027, 032, 098, 120, 155, 157, 167, 194, 202, 219, 221, 224, 229, 244, 246, 247
Sansui	176, 225, 235, 251
Sanyo	042, 089, 092, 109, 184, 194, 217, 219, 244
Scott	005, 006, 037, 041, 093, 098, 187, 194, 224, 247
Sears	003, 005, 010, 016, 027, 042, 087, 096, 098, 099, 101, 012, 104, 125, 131, 132, 184, 187, 194, 202, 217, 223, 224, 251
Sharp	017, 054, 098, 129, 141, 200, 224, 254
Signature	010, 018, 027, 251
Sony	000, 109, 180, 189, 232
Soundesign	005, 025, 041, 187, 251
Spectricon	032, 120
Starlite	041
Supra	005, 022
Sylvania	005, 006, 010, 024, 025, 027, 068, 098, 110, 132, 175, 194, 224, 237, 240, 251
Symphonic	132, 179, 251
TIVO	136, 137, 138
TMK	005
Tandy	098, 113, 129, 224, 251
Tatung	009, 010, 027, 183, 211
Teac	251
Technics	008, 012, 165, 242
Techwood	005, 165
Teknika	005, 010, 016, 018, 022, 024, 025, 027, 041, 072, 098, 114, 149, 187, 202, 223, 224, 251

Telerent	018, 098, 224
Teletech	032, 120
Thomson	051, 116, 142
Toshiba	016, 017, 054, 096, 131, 194, 202, 240, 245, 247
Totevision	098, 223, 224
Universal	043, 206
Vector Research	006, 238
Victor	057, 060, 235
Video Concepts	070, 238, 251
Vidtech	005
Viking	022
Wards	000, 005, 006, 010, 018, 027, 043, 067, 068, 125, 141, 182, 187, 194, 206, 224, 251
Westinghouse	037, 041, 130, 176, 194
Yamaha	005, 006, 238, 251
Yorx	006, 194
Zenith	001, 018, 024, 178, 223, 225, 235, 248, 249, 251
Zonda	032, 120
JC Penney	003, 005, 006, 014, 016, 043, 072, 087, 096, 098, 125, 131, 149, 165, 194, 202, 206, 210, 223, 224, 231, 238, 242
JVC	057, 059, 060, 234, 235, 238
Jensen	056
KEC	041
KMC	098, 224
KTV	005, 006, 039, 041, 098, 224
Kawasho	061
Kenwood	006, 235, 251
Kloss	022, 110, 175
Konka	236
LXI	003, 005, 010, 027, 087, 125, 129, 131, 132, 194, 223, 251
Lloytron	098, 224
Lodgenet	018
Loewe	010, 027
Logik	018
Luxman	005
MGA	005, 006, 071, 072, 149, 187, 194, 240
MTC	005, 006, 010, 016, 024, 027, 202, 251
Magnasonic	010, 024, 027, 129, 131, 187
Magnavox	000, 005, 006, 008, 010, 017, 024, 025, 027, 054, 067, 068, 098, 110, 132, 154, 167, 175, 187, 194, 216, 224, 231, 237, 251, 254
Majestic	018
Marantz	005, 006, 010, 027, 068, 072, 149, 237, 238
Marta	223

Matsui	010, 027, 032, 109, 120
Memorex	005, 018, 032, 072, 120, 149, 187, 194, 219, 223, 242, 244, 248, 251
Midland	001, 003, 087, 165
Mitsubishi	005, 006, 017, 054, 070, 071, 072, 123, 129, 149, 187, 194, 239, 240
Multitech	041, 251
NAD	002, 005, 131, 166
NEC	005, 006, 007, 183, 191, 194
National	008, 010, 011, 012, 027, 146, 190, 211
Nikkai	010, 027, 113, 131
Onwa	041
Optimus	012, 166, 194, 242
Optonica	129
Orion	010, 027, 037, 176, 212, 225, 226
Osume	017, 054
Panasonic	008, 009, 010, 011, 012, 127, 148, 165, 177, 183, 211, 218, 231, 241, 242
Philco	005, 006, 010, 024, 025, 027, 052, 067, 068, 072, 098, 110, 149, 175, 176, 183, 216, 224, 237, 251
Phillips	005, 006, 010, 025, 027, 068, 098, 136, 137, 138, 150, 216, 220, 223, 224, 237, 251
Pioneer	002, 008, 048, 051, 076, 131, 166, 235
Portland	005, 024, 098, 224
Pulsar	001, 024, 248
Quasar	008, 009, 012, 165, 183, 211, 231, 242
RCA	003, 005, 008, 014, 048, 063, 072, 078, 079, 080, 084, 085, 086, 087, 125, 130, 147, 149, 160, 182, 183, 210, 231, 233, 251, 254
Radio Shack	003, 005, 041, 072, 087, 098, 141, 149, 194, 224, 230, 242, 251
Realistic	005, 006, 035, 041, 098, 141, 194, 222, 223, 224, 251